



WE International, Inc.


POST OFFICE BOX 97 • SYRACUSE, INDIANA 46567 USA
PHONE: (219) 457-3066 • FAX: (219) 457-8807
email: weexport@we-intl.com • <http://www.we-intl.com>

Installation Sheet

Basement Walls

With Single Bubble Foil, Method #2

- Quick, easy and safe to install
- Provides reflective insulation for radiant heat loss or gain
- Blocks up to 97% of radiant heat during the winter
- 100% vapor proof - creates a vapor barrier
- Unaffected by moisture and humidity

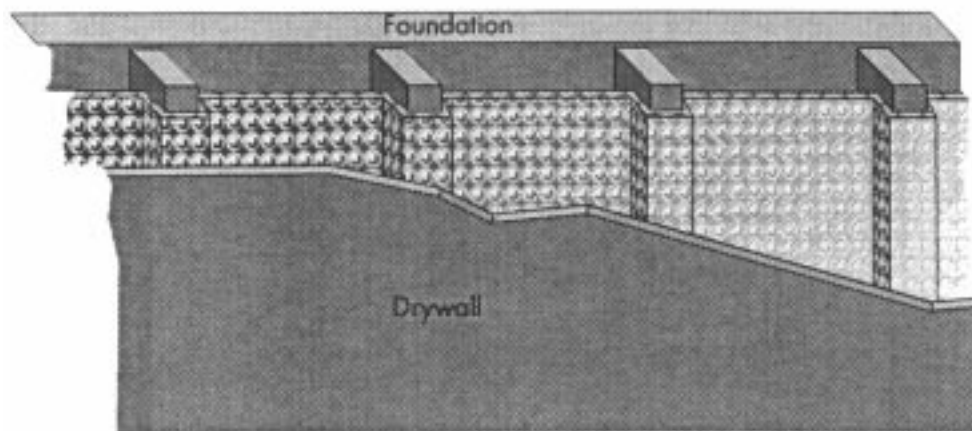

- 1) Fasten 2x4 wall against concrete foundation using usual methods.
- 2) Attach rFoil *Single Bubble Foil* horizontally to 2x4's, stapling it 1" back into the wall cavity, as shown.
- 3) Seal all seams with 2" Reflective Foil Tape (All tape should be applied using a flat edge taping tool to ensure good adhesion).
- 4) Attach drywall or paneling as usual.